

INSTRUCTION MANUAL

 
ALARM CHRONOGRAPH MODULE



HOW TO USE ELECTRO-LUMINESCENT AND ELECTRIC TORCH


PRESS BUTTON S4 TO USE ELECTRO LUMINESCENT FUNCTION.

PRESS BUTTON S2 TO USE ELECTRIC TORCH FUNCTION.




"NORMAL TIME DISPLAY"

HOW TO SET 12/24 HOUR FORMAT

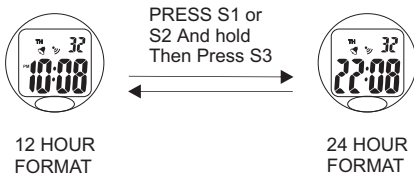


HOW TO DISPLAY MONTH/DATE

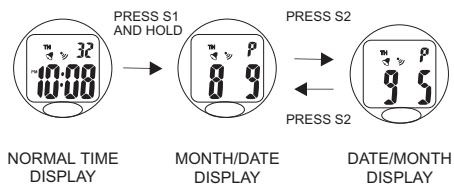

CARE OF YOUR WATCH

- This watch contains electronic components. Never attempt to open the case or remove the back cover.
- Do not operate push buttons below the surface of the water while swimming or diving.
- Should water or condensation appear in the watch, have the watch checked immediately. Corrosion of electronic parts can occur inside the case.
- Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
- Avoid exposing the watch to extreme temperature.
- Clean the watch with soft cloth and clean water only. Avoid using chemicals.
- Keep your watch away from the conditions of strong electric field and static electricity.


REGULAR DISPLAY AND BUTTON OPERATION

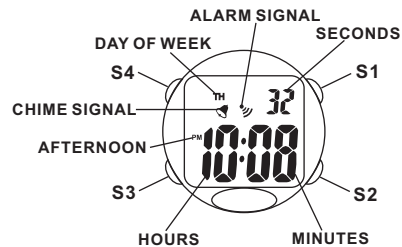


(Battery: CR2016 or CR2032)

- PRESS "BUTTON S2" AND HOLD IT, TO SHOW THE ALARM TIME, AT THE SAME TIME TORCH IS ON. RELEASE TO RETURN TO NORMAL TIME DISPLAY.
- PRESS "BUTTON S1" AND HOLD IT, TO SHOW THE MONTH/DATE OR "DATE/MONTH", RELEASE S1 RETURN TO NORMAL TIME DISPLAY.


ALARM AND CHIME DISPLAY

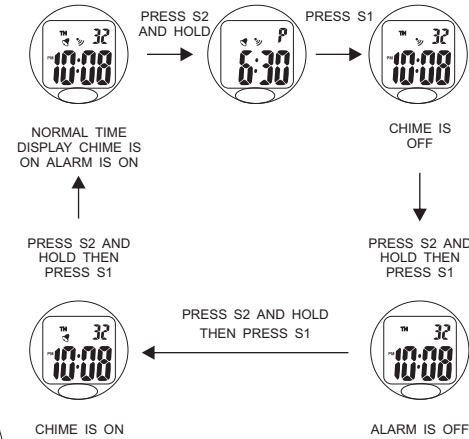

HOW TO SET THE ALARM TIME

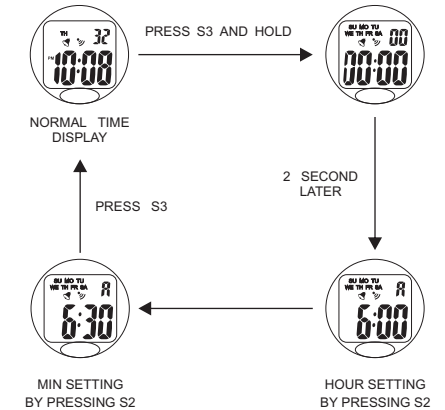

HOW TO OPERATE STOP WATCH

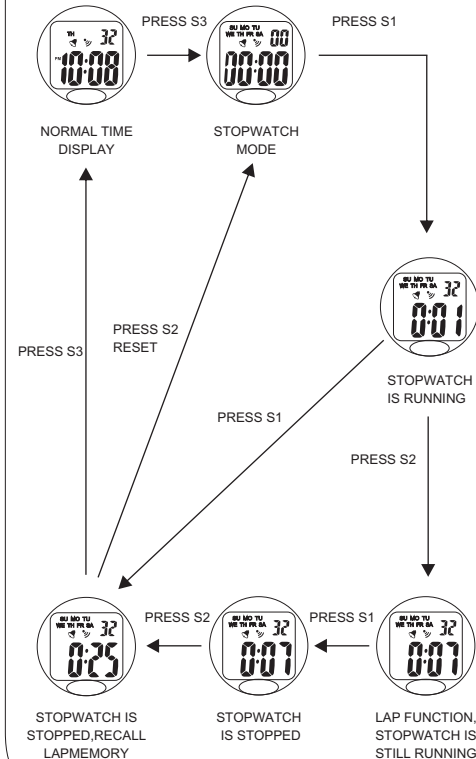

HOW TO SET NORMAL TIME

